



**A MORE DETAILED AND EXTENSIVE INSTRUCTIONS FOR USE** can be downloaded from  
**[www.whirlpool.eu](http://www.whirlpool.eu)**

## **YOUR SAFETY AND THAT OF OTHERS IS VERY IMPORTANT**

This manual and the appliance itself provide important safety warnings, to be read and observed at all times.

This is the danger symbol, pertaining to safety, which alerts users to potential risks to themselves and others.



All safety warnings are preceded by the danger symbol and the following terms:



### **DANGER**

**Indicates a hazardous situation which, if not avoided, will cause serious injury.**



### **WARNING**

**Indicates a hazardous situation which, if not avoided, could cause serious injury.**

All safety warnings give specific details of the potential risk present and indicate how to reduce risk of injury, damage and electric shock resulting from improper use of the appliance. Carefully observe the following instructions:

- Use protective gloves to perform all unpacking and installation operations.
- The appliance must be disconnected from the power supply before carrying out any installation work.
- Installation and maintenance must be carried out by a qualified technician, in compliance with the manufacturer's instructions and local safety regulations. Do not repair or replace any part of the appliance unless specifically stated in the user manual.
- Power cable replacement must be carried out by a qualified electrician. Contact an authorised service centre.
- Regulations require that the appliance is earthed.

- The power cable must be long enough for connecting the Appliance, once fitted in its housing, to the main power supply.
- For installation to comply with current safety regulations, an all-pole disconnect switch with minimum contact gap of 3 mm must be used.
- Do not use multiple plug adaptors if the oven is fitted with a plug.
- Do not use extension leads.
- Do not pull the power supply cable.
- The electrical components must not be accessible to the user after installation.
- Do not touch the appliance with any wet part of the body and do not operate it when barefoot.
- This appliance is designed solely for use as a domestic appliance for cooking food. No other type of use is permitted (e.g.: heating rooms or outdoor use).  
The Manufacturer declines all responsibility for inappropriate use or incorrect setting of the controls.
- This appliance is intended to be used built-in. Do not use it freestanding.
- The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements.
- Very young (0-3 years) and young children (3-8 years) shall be kept away unless continuously supervised.
- Children from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance only if they are supervised or have been given instructions on safe appliance use and if they understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- During and after use, do not touch the heating elements or interior surfaces of the appliance: risk of burns. Do not allow the appliance to come into contact with cloths or other flammable materials until all the components have cooled down completely.

- At the end of cooking, exercise caution when opening the appliance door, letting the hot air or steam exit gradually before accessing the appliance. Do not obstruct the vent apertures.
- Use oven gloves to remove pans and accessories, taking care not to touch the heating elements.
- Do not place flammable materials in or near the appliance: a fire may break out if the appliance is inadvertently switched on.
- Do not use the microwave oven for heating anything in airtight sealed containers. The pressure increases and may cause damage when opening or may explode.
- Do not use the microwave oven for drying textiles, paper, spices, herbs, wood, flowers, fruit or other combustible materials. Fire could result.
- Do not leave the appliance unattended, especially when using paper, plastic or other combustible materials in the cooking process. Paper can char or burn and some plastics can melt if used when heating foods.
- Use containers suitable for use in a microwave oven only.
- Overheating the liquid beyond boiling point can occur without evidence of bubbling. This could result in a sudden boil over of the hot liquid.
- Do not use microwave oven for deep-frying, because the oil temperature cannot be controlled.
- After heating baby food or liquids in a baby bottle or in a baby food jar, always stir and check the temperature before serving. Ensure the lid and the teat is removed before heating.
- If alcoholic beverages are used when cooking foods (e.g. rum, cognac, wine), remember that alcohol evaporates at high temperatures. As a result, there is a risk that vapors released by the alcohol may catch fire upon coming into contact with the electrical heating element.
- Do not use microwave oven for cooking or reheating whole eggs with or without shell since they may explode even after microwave heating has ended.

- If material inside/outside the appliance should ignite or smoke is observed, keep appliance door closed and turn the appliance off. Disconnect the power cord or shut off power at the fuse or circuit breaker panel.
- Do not over-cook food. Fire could result.
- Cleaning is the only maintenance normally required. Failure to maintain the appliance in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- Never use steam cleaning equipment.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the appliance door glass since they can scratch the surface, which may result in shattering of the glass.
- Do not use corrosive chemicals or vapors in this appliance. This type of appliance is specifically designed to heat or cook food. It is not designed for industrial or laboratory use.
- Do not remove any cover. The door seals and the door seal areas must be regularly inspected for damage. If these areas are damaged the appliance should not be operated until it has been repaired by a trained service technician.
- Service only to be carried out by a trained service technician. It is hazardous for anyone other than a trained person to carry out any service or repair operation, which involves the removal of any cover, which gives protection against exposure to microwave energy.

**THIS OVEN**, which is intended to come into contact with foodstuffs, complies with European Regulation (  ) n. 1935/2004 and has been designed, manufactured and sold in conformity with the safety requirements of the

“Low Voltage” directive 2006/95/CE (which replaces 73/23/CEE and subsequent amendments), the protection requirements of “EMC” 2004/108/CE.

## SAFEGUARDING THE ENVIRONMENT

### DISPOSAL OF PACKAGING MATERIALS

The packaging material is 100% recyclable and is marked with the recycle symbol (  ).

The various parts of the packing must therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal.

### ENERGY SAVING TIPS

- Only pre-heat the microwave oven if specified in the cooking table or recipe.
- Use dark lacquered or enameled baking moulds as they absorb heat far better.
- Switch the appliance off 10/15 minutes before the set cooking time. Food requiring prolonged cooking will continue to cook even once the appliance is switched off.

### SCRAPPING THE PRODUCT

- This appliance is marked in conformity with European Directive 2012/19/EU, Waste Electrical and Electronic Equipment (WEEE).
- By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.
- The symbol  on the product or on the accompanying documentation indicates that it should not be treated as domestic waste but must be taken to an appropriate collection centre for the recycling of electrical and electronic equipment.

## INSTALLATION

**AFTER UNPACKING THE APPLIANCE**, make sure that it has not been damaged during transport and that the appliance door closes properly.

**IN THE EVENT OF PROBLEMS**, contact the dealer or the nearest After-sales Service.

**TO PREVENT ANY DAMAGE**, only remove the appliance from its polystyrene foam base at the time of installation.

### MOUNTING THE APPLIANCE

**FOLLOW THE SUPPLIED SEPARATE MOUNTING INSTRUCTIONS** when installing the appliance.

### PRIOR TO CONNECTING

**CHECK THAT THE VOLTAGE** on the rating plate corresponds to the voltage in the home.

**DO NOT REMOVE** the microwave inlet protection plates located on the side of the microwave oven cavity wall. They prevent grease & food particles from entering the microwave inlet channels.

**ENSURE THE MICROWAVE** oven cavity is empty before mounting.

**ENSURE THAT THE APPLIANCE IS NOT DAMAGED.** Check that the microwave oven door closes firmly against the door support and that the internal door seal is not damaged. Empty the microwave oven and clean the interior with a soft, damp cloth.

**DO NOT OPERATE** this appliance if it has a damaged mains cord, if it is not working properly, or if it has been damaged or dropped. Do not immerse the mains cord in water. Keep the cord away from hot surfaces. Electrical shock, fire or other hazards may result.

**IF THE POWER SUPPLY CORD** is too short, have a qualified electrician or serviceman install an outlet near the appliance.

**THE POWER SUPPLY CORD** must be long enough for connecting the appliance, once fitting in its housing, to the main power supply.

**FOR INSTALLATION** to comply with current safety regulations, an all-pole disconnect switch with minimum contact gap of 3 mm must be utilized.

### AFTER CONNECTING

**THE APPLIANCE** can be operated only if the microwave oven door is firmly closed.

**THE EARTHING OF THIS APPLIANCE IS COMPULSORY.** The manufacturer will accept no responsibility for injury to persons, animals or damage to objects arising from the non-observance of this requirement.

**THE MANUFACTURERS** are not liable for any problems caused by the user's failure to observe these instructions.



# QUICK START GUIDE



**THIS QUICK START GUIDE** is designed to cover a range of different models. The number of buttons and functions may therefore differ from the specific model you have purchased.

**THE PRINCIPLE OF OPERATION IS:**


- ∴ Choose function
- ∴ Adjust setting
- ∴ Press the start button

PLEASE NOTE!

**APPEARANCE**

**THE ACTUAL APPEARANCE** of the control panel may look different than the panels shown in this guide depending on the model you have purchased.

**Example panels**

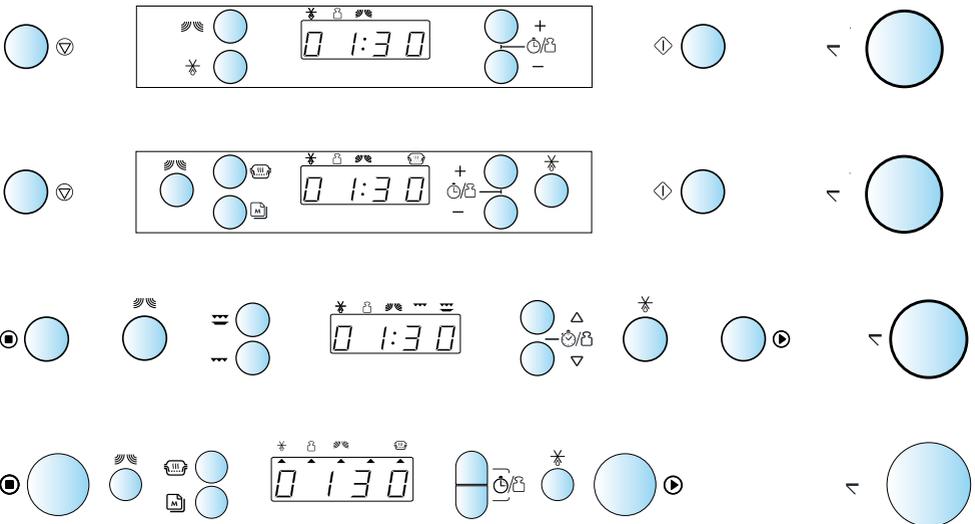



**WHEN THE APPLIANCE IS FIRST PLUGGED IN** or after a power failure, the display is blank. If the clock is not set, the display will remain blank until the cooking time is set.

**KEEP THE DOOR OPEN** while setting the Clock. This gives you 5 minutes to complete the setting of the Clock. Otherwise, each step must be accomplished within 30 seconds.

## CLOCK SETTING

- 1 **PRESS THE STOP BUTTON (3 SECONDS) UNTIL THE LEFT-HAND DIGIT (HOUR'S) FLICKER.**
- 2 **PRESS THE +/- BUTTONS TO SET THE HOURS.**
- 3 **PRESS THE START BUTTON AGAIN. (THE TWO RIGHT HAND DIGITS (MINUTES) FLICKER).**
- 4 **PRESS THE +/- BUTTONS TO SET THE MINUTES.**
- 5 **PRESS THE START BUTTON AGAIN.**



**THE CLOCK IS SET** and in operation.

**IF YOU WISH TO REMOVE THE CLOCK** from the display once it has been set, simply press the Stop button again for 3 seconds and then press the Stop button once more.

**TO REINSTATE THE CLOCK**, follow the above procedure.

## DOOR OPENING

**PRESS THE BUTTON TO OPEN THE DOOR.**

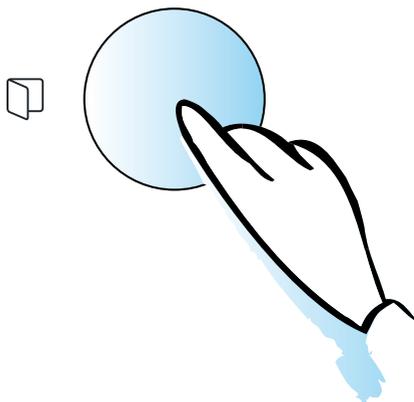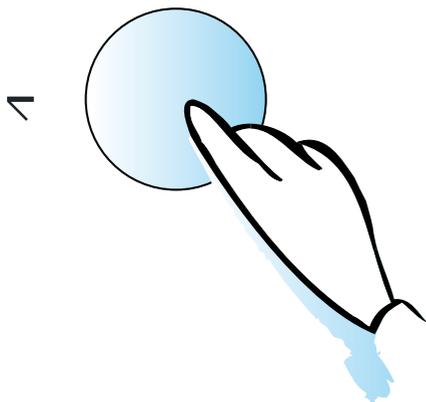



# QUICK START GUIDE



EN

## 1. CHOOSE FUNCTION

### DIGITAL DISPLAY

The display includes a 24-hour clock and indicator symbols.



### STOP BUTTON

Press shortly to stop or reset any of the oven functions.

### NOTE:

THE NUMBER OF FUNCTION BUTTONS may differ from the specific model you have purchased.

**THE FUNCTION BUTTONS** lets you select various functions.


FUNCTION	DESCRIPTION
<b>STANDBY</b>	<b>24 HOUR CLOCK, BLANK DISPLAY &amp; KITCHEN TIMER</b>
<b>MICROWAVE</b>	<b>COOKING &amp; REHEATING WITH MICROWAVES ONLY</b>
<b>CRISP</b>	<b>CRISPING DOUGH BASED FOODS SUCH AS PIZZA &amp; PIE</b>
<b>GRILL</b>	<b>BROWNING WITH GRILL ONLY</b>
<b>GRILL + MW</b>	<b>COMBI COOKING</b>
<b>STEAM</b>	<b>STEAM COOKING</b>
<b>JET DEFROST</b>	<b>DEFROSTING QUICKLY</b>
<b>MEMORY</b>	<b>RECALL A PREFERRED SETTING</b>



# QUICK START GUIDE



## 2. ADJUST SETTING

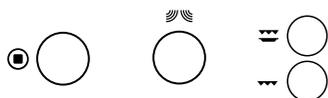

### JET START BUTTON

Use to start the cooking process or invoke the Jet Start function.

The +/- buttons lets you adjust various settings.	
FUNCTION	PRESS TO SET
<b>STANDBY</b>	<b>KITCHEN TIMER</b>
<b>MICROWAVE</b>	<b>MICROWAVE POWER &amp; COOKING TIME</b>
<b>CRISP</b>	<b>COOKING TIME</b>
<b>GRILL</b>	<b>COOKING TIME</b>
<b>GRILL + MW</b>	<b>MICROWAVE POWER &amp; COOKING TIME</b>
<b>STEAM</b>	<b>FOOD CLASS &amp; WEIGHT</b>
<b>JET DEFROST</b>	<b>FOOD CLASS &amp; WEIGHT</b>
<b>MEMORY</b>	<b>ADJUST AND STORE A SETTING</b>